



FULL FCONTROL USER GUIDE

P4/4



FULL FCONTROL USER GUIDE

■ TIMETABLE - STROBE MODE



Ref.UG-110101-E5, 2024/01 edition.

■ USER SECURITY

Do respect the power supply voltages and the connection terminals.
Do not modify or dismantle all or part of the product.
Do not connect or clean when power is on.



■ EQUIPMENT MAINTENANCE

CLEANING (when the product is switched off)

Please use a soft and dry cloth. Do not use any abrasive material.
Do not use any cleaning solvent or aggressive chemical product.
TPL Vision recommends to use isopropyl alcohol.

■ OPERATING CONDITIONS

Not for outdoor use.

Features and presentations liable to changes without notice.



Brenchley House, School Road
Charing, Kent TN27 0JW
United Kingdom

TPL VISION
IS AN **ISO 9001**
CERTIFIED MANUFACTURER

+44 (0)1738 310 392

contact@tpl-vision.co.uk

www.tpl-vision.com

PREAMBLE



This notice includes all the advice and warnings that enables a correct set up and a safe use of the product.
TPL Vision can not be responsible for the bad use of the notice. If so, TPL Vision cancels the guarantee's effects.



■ UNPACKING

Products are packed in our factory, using suitable materials for a safe transport through the usual means of transportation, in France and internationally. However, a damaged package must be reported to the carrier on delivery. Handwritten reservations must be indicated on the delivery order. Moreover, please send a letter or an email to TPL Vision as soon as possible (up to 24 hours after the delivery). If the transportation damage has not been stipulated on the delivery order and reported to TPL Vision in time, the package will not be taken back nor exchanged. To open the package, do not use any cutting blade to avoid damaging the product(s). Please use the delivered accessories, if needed (do not use any other products or equivalents to replace the delivered accessories).

■ DIMENSIONS

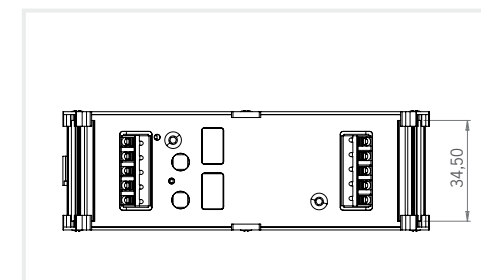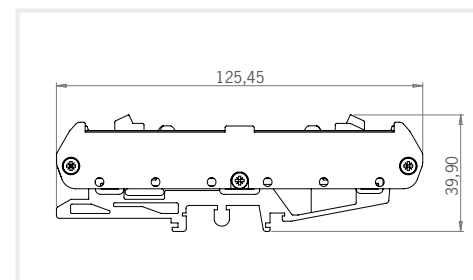

■ FIXING

During the fixing time, the product has to be switched off and unplugged. The fixing is made on Rail DIN.



FULL FCONTROL USER GUIDE


P2/4

P3/4




CONNECTION


CONTINUOUS

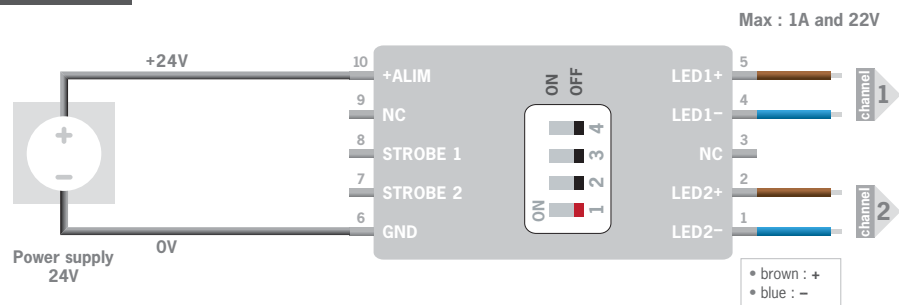


CONTINUOUS + POTENTIOMETERS

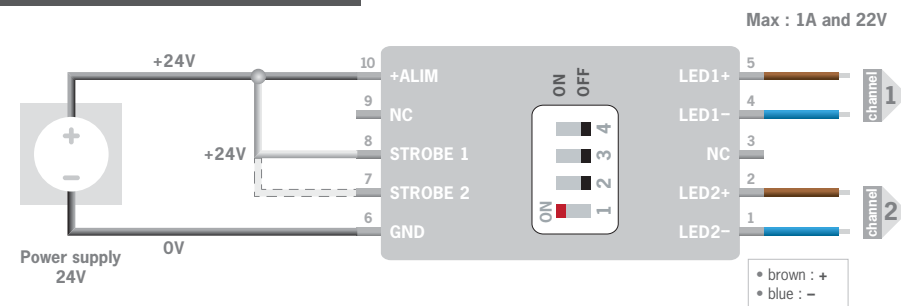


STROBE

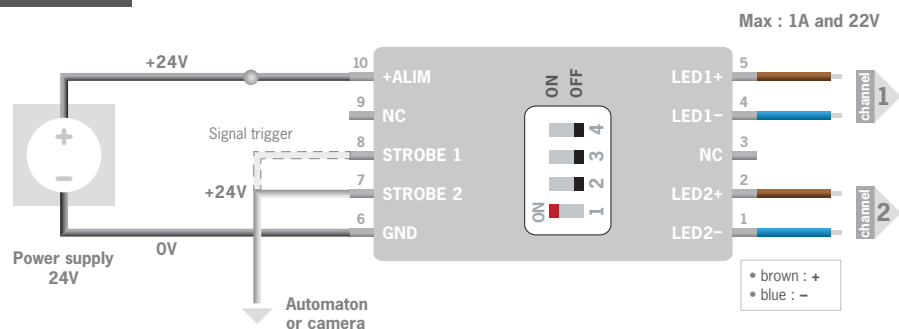



PNP-LIKE AUTOMATON OUTPUT

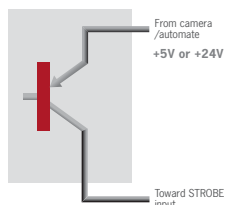

NPN-LIKE AUTOMATON OUTPUT

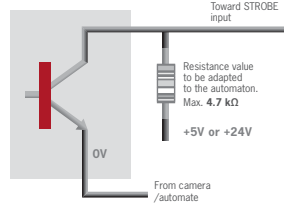

SETTING

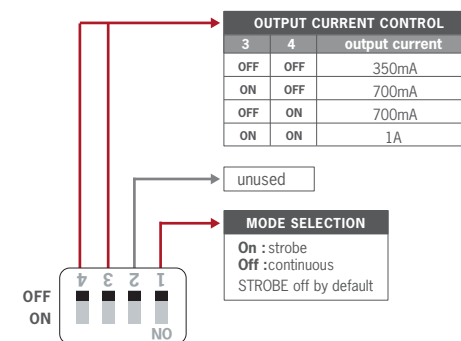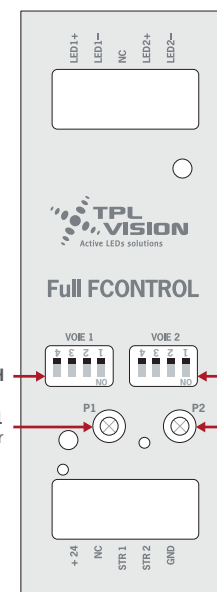

The potentiometers P1 and P2 help to adapt the lighting luminosity in strobe mode (only).

2 operating modes :

- Continuous : LEDs are constantly working.
- Strobe : LEDs are working as long as the triggering signal is equivalent to 1.